BANDAI

Tamagotchi Mini

Asst. #19510

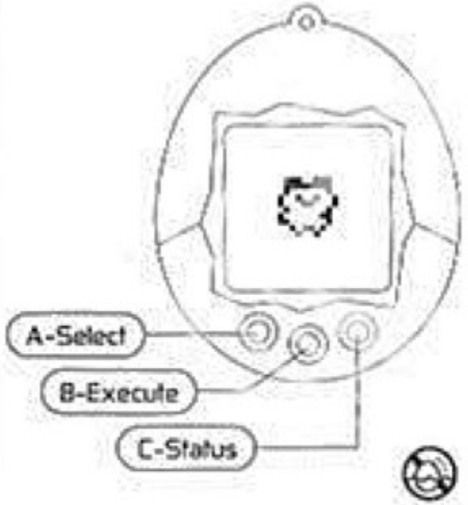

DO NOT WASH IN WATER

⚠ **WARNING:**
CHOKING HAZARD - Small parts.
Not for Children under 3 years.

⚠ **CAUTION: PLEASE READ BEFORE PLAYING WITH TOY**

- **Do not:** 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hinged parts of toy.

① You can take care of your Tamagotchi by clicking just one button! Tamagotchi Mini has some special functions!

HOW TO WAKE TAMAGOTCHI

1- Pull out the tab from the side of the casing and Tamagotchi will appear after a long "beep."

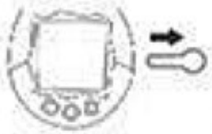

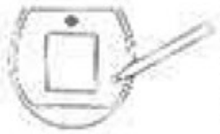

2 - To reset, press the "Reset" button on the back of the casing with a pointed object such as a pen.

NOTE: do not apply too much pressure, especially with a sharp object.

3 - Set up Time: Press button (B) to display time screen. Hours and minutes may be set by using button (A) to scroll, and button (B) to choose/set the correct number. Press button (B) again to return to normal mode.

4 - Once in normal mode, your Tamagotchi will appear after 1 minute.

② When your Tamagotchi needs something, it calls you with a "beep." Check the screen to see what it needs.

HOW TO TAKE CARE OF YOUR TAMAGOTCHI

FEEDING TIME



Press button (A) then press button (B) to choose "Meal" or "Snack".

TOILET/FLUSH

When your Tamagotchi makes a mess, press button (A) to clean it up.

HEALTH

When the "Skull icon" appears, your Tamagotchi is sick. Use button (A) to nurse your Tamagotchi back to health.

LIGHTS

When your Tamagotchi goes to sleep, use button (A) to select "OFF".

③ RETURN TO TAMAGOTCHI PLANET

If you do not take good care of it, your Tamagotchi will return to Tamagotchi Planet. To start again, press button (A) or (C) until a new egg appears. It will hatch after a few minutes.

RESET OPTION

When to reset?

- If it is the first time you activate your Tamagotchi.
- If the screen is not clear or freezes for a long time.
- When you have to change the battery.

SOUND ON/OFF

Press and hold buttons (A) and (C) together. Select sound ON or OFF.

PAUSE MODE

To place Tamagotchi in PAUSE mode:

- Press and hold button (A), then press button (B). "!" will appear above your Tamagotchi character. The character will remain "frozen" until taken out of PAUSE mode. (While in PAUSE mode, the clock will continue to run, but the Tamagotchi character will not grow.)

To take Tamagotchi out of PAUSE mode:

- Press and hold button (A), then press button (B). "!" will disappear from the screen and your Tamagotchi character will begin to move again.

④ HOW TO REPLACE BATTERY

Requires one CR-2032 3V battery. Using a small screwdriver, turn the screw on the back counter-clockwise to loosen.

Remove back of case and old battery, as shown. Insert the new battery and replace cover. Tighten screw by turning clockwise.

NOTE: You will NOT need to change the battery before using your Tamagotchi for the first time.

⚠ **CAUTION:** Keep batteries away from children. Batteries may be harmful if swallowed. Requires 1 CR-2032 (3V) battery. Battery included.
NOTE: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

Conforms to safety standard ASTM F963-03. Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. TM & © 2005 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION and all related logos, names and distinctive likenesses thereof are the exclusive property of Bandai. © 2004-2005 Bandai, W.Z. All rights reserved.